



Ultra-Dewatering Bag - Locking Bar Instructions



Step 1 - Place Straight Bar (A) (Flat Ends) and Locking Bar (B) (90 Degree Bend at both ends) at opposite end from hose opening.

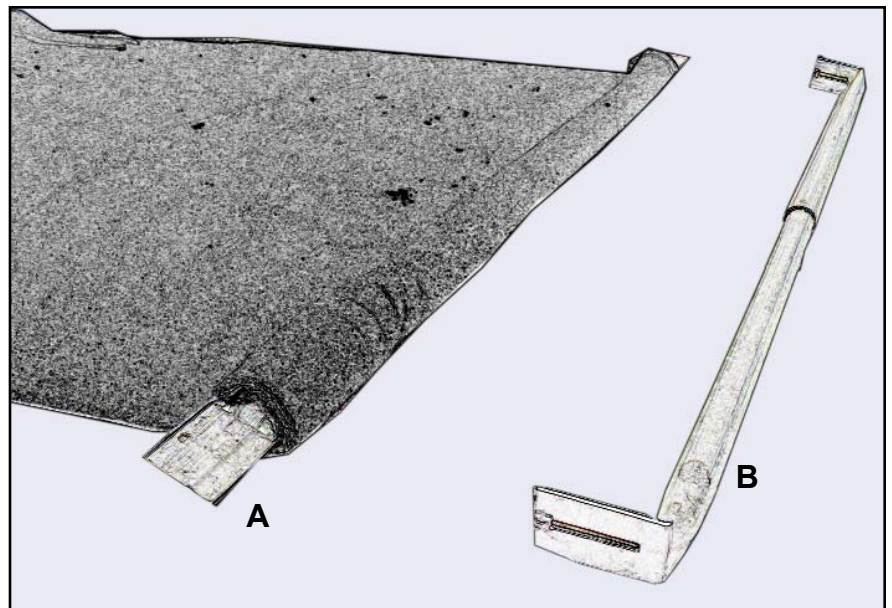

Step 2 - Place Straight Bar (A) on top of Dewatering Bag and roll in material 3-4 times.

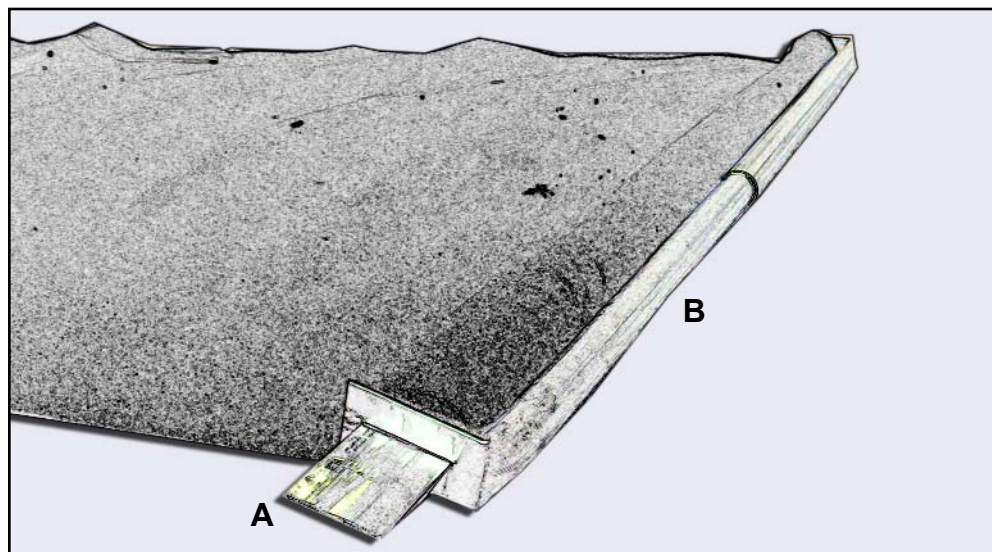

Step 3 - Place flat ends of Straight Bar (A) through slots in ends of Locking Bar (B) and adjust to width of Dewatering Bag. Unit is now ready for use.



UltraTech International, Inc.
11542 Davis Creek Court
Jacksonville, FL 32256
Toll Free (800) 353-1611
Fax (904) 292-1325
Email info@stormwater-products.com
www.Stormwater-Products.com

Other Stormwater Management Products Available from UltraTech



Catch Basin Inserts



Spill Response Products



Outdoor Containment